


CRAZY KONG One P.C. Board

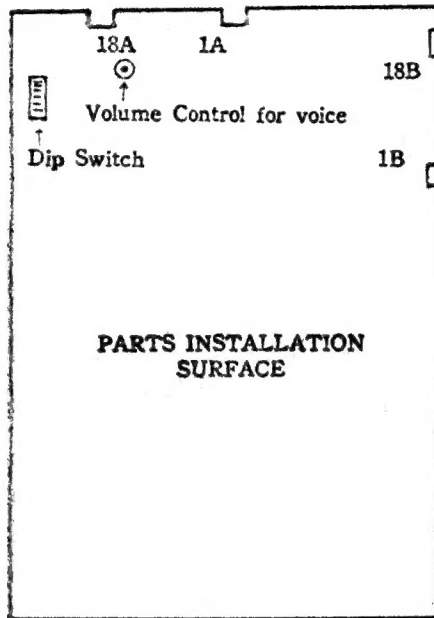

CONNECTOR DIAGRAM

A side		B side
GND	1	GND
GND	2	GND
GND	3	GND
SP GND	4	S P
+12V	5	+12V
	6	1P Upper
	7	2P Upper
TV GND	8	TV GND
+5V	9	+5V
1P Lower	10	
2P Lower	11	
	12	2P Start
Coin	13	1P Start
1P Jump	14	1P Right
TV Red	15	1P Left
2P Right	16	TV Blue
2P Left	17	TV Green
2P Jump	18	TV Same period

NOTE: Be sure to check picture direction.
It differs depending on the makers.

DIP SWITCH

WARNING!!

Re-Check connector wirings
before SW-ON. P.C. Board maybe
damaged if power lines (+5V
+12V) are misconnected.

	1	2	3	4	5	6	7	8
Mister								
3 Persons	off	off						
4 Persons	on	off						
5 Persons	off	on						
6 Persons	on	on						
Extra score								
7,000 points			off	off				
10,000 points			on	off				
15,000 points			off	on				
20,000 points			on	on				
Credit								
1 coin 1 play					off	off	off	
1 2					off	on	off	
1 3					off	off	on	
1 4					off	on	on	
2 1					on	off	off	
3 1					on	on	off	
4 1					on	off	on	
5 1					on	on	on	

In case of on, Upright type.
In case of off, Table type.